

STARTING THE ENGINE

- 1 Check that the handbrake is on and that the gear lever is in neutral.
- 2 Turn the ignition key away from you, until the warning lights show on the dashboard.
- 3 Turn the key to start the engine but let go of the key as soon as you hear the engine start.

MOVING OFF

- 1 Press the clutch all the way down and keep it down.
- 2 With your palm towards me , move the gear lever into 1st position.
- 3 Rest your left hand on the handbrake ready to release it but not yet.
- 4 Get the biting point with the clutch and the gas - keep both feet still.
- 5 Check the interior mirror and the right door mirror then your blind spot (over your right shoulder)
- 6 Signal right (up)
- 7 If it is clear release the handbrake.
- 8 Clutch up a fraction until the car moves then hold it still - the gas will be going down in equal proportions to the clutch coming up to keep it balanced. The car will now be moving.
- 9 Steer out a fraction to the right and straighten up. You should now be a metre from the kerb and ready to change into 2nd gear.